



**Home Sewing Machine
PARTS REFERENCE LIST**

**MODEL: CE5500PRW/CE5500/HS2500
CP6500/CP7500
DS120/DS140/FS20/FS40/
XR4040/FS40WT**

MECHANISMS & ELECTRONICS

CONFIDENTIAL

Copyright © 2010 Brother Industries, Ltd.
All rights reserved.

CONTENTS

(1) MAIN FRAME / COVER	2
(2) UPPER SHAFT MECHANISM / NEEDLE BAR / PRESSER FOOT UNIT.....	6
(3) FEED UNIT	8
(4) BOBIN WINDING MECHANISM / NEEDLE THREADING MECHANISM	10
(5) ELECTRIC PARTS / MAIN MOTOR UNIT	12
(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE	14
SPARE PARTS.....	18

Note on parts:

We keep performance parts for this sewing machine for at least 8 years after this model is discontinued.
Performance parts are the necessary parts to maintain the function of the sewing machine.

This exploded view diagram illustrates the assembly of a sewing machine. The main body (31) is the central component, with various parts shown in their relative positions for assembly. Key components include:


- Top Cover (81):** The uppermost protective part, shown with its internal structure (82, 83, 84, 85).
- Motor and Drive Assembly:** Located at the front, including the motor (68), drive shaft (3), and various gears and bearings (8, 7, 25, 5, 11, 10, 12).
- Presser Foot Assembly:** Consists of the presser foot (1), presser bar (14), and various adjustment screws and pins (2, 6, 9, 4, 63, 65, 62).
- Bobbin Winder:** A separate unit (69) used for winding bobbins, shown with its own set of components (87, 88, 62, 60, 58, 51, 40, 57, 60, 55, 54, 53, 27, 28, 46, 47, 49, 50, 42, 44, 61).
- Base and Feet:** The bottom housing (71) and various feet (72, 73, 74, 75, 76, 77, 78) used for different sewing techniques.
- Control Panel (30):** The front-facing control interface with buttons and a display (29).
- Internal Components:** Various electronic and mechanical parts (e.g., 32, 34, 35, 38, 39, 40, 41, 43, 45, 48, 56, 60, 66, 67, 69, 70, 79, 80, 86) are shown in their respective positions within the machine's frame.

Dashed lines indicate the assembly sequence and the relative positions of the parts. The diagram is a technical illustration used for identifying components and understanding the machine's internal structure.

(1) MAIN FRAME / COVER

No.	CODE	NAME	REMARKS	No.	CODE	NAME	REMARKS
1	XE6631001	BOBBIN WINDER GUIDE ASSY			XE8845001	DECORATION PLATE A (FS20)	1000019547
2	0A5300806	SCREW PAN (S/P WASHER) M3X8			XE8854001	DECORATION PLATE A (FS40, FS40WT)	1000019560
3	XE6425001	SPOOL PIN		30	XE7562001	DECORATION PLATE B (CE5500PRW)	
4	XE6427001	SPOOL PIN HOLDER			XE8372001	DECORATION PLATE B (CE5500)	1000017829
5	XE7218001	SPOOL PIN SUPPORTER			XE8846001	DECORATION PLATE B (FS20)	1000019547
6	XE6633001	SPOOL PIN STOP PLATE			XE8855001	DECORATION PLATE B (FS40, FS40WT)	1000019560
7	XE7626001	SPOOL PIN SPRING COVER		31	XE6441001	DECORATION COVER (CE5500PRW, CE5500, FS20, FS40, FS40WT)	
8	XE7695001	SPOOL PIN SPRING		32	085411416	TAPTITE BIND B M4X14 (CE5500PRW, CE5500, FS20, FS40, FS40WT)	
9	087411416	TAPTITE CUP B M4X14		33	XE7287001	SS BUTTON (HS2500, CP6500, CP7500, DS140)	
10	XE8912001	BOBBIN PRESSER	1000020011	34	XE8856001	SS BUTTON (FS40, FS40WT)	1000019560
11	0A4302006	SCREW PAN (S/P WASHER) M3X20		35	XE6444001	REVERSE BUTTON (CE5500PRW, CE5500, FS20, FS40, FS40WT)	
12	021300106	NUT 1 M3		36	XE6506001	REVERSE BUTTON (HS2500, CP6500, CP7500 DS120, DS140, XR4040)	
13	XE6429001	THREAD GUIDE PLATE ASSY		37	XE7288001	NP BUTTON (HS2500, CP6500, CP7500, DS140)	
14	XE6634001	THREAD GUIDE SUPPORTING PLATE		38	XE6446001	NP BUTTON (FS40, FS40WT)	1000019560
15	XE7286001	CUTTER COVER ASSY		39	XE7285001	SV KEYTOP (HS2500, CP6500, CP7500, DS140)	
16	XE6640001	CUTTER COVER			XE6448001	SV KEYTOP (FS40, FS40WT)	1000019560
17	XE6641001	CUTTER HOLDER PLATE		40	XE6500001	SV JOINT PLATE (HS2500, CP6500, CP7500, DS140, FS40, FS40WT)	
18	X80321021	NT LOWER THREAD CUTTER		41	XE6449001	SELECTING BUTTON A (CE5500PRW, CE5500, FS20, FS40, FS40WT)	
19	060300416	SCREW BIND M3X4		42	XE6508001	SELECTING BUTTON A (HS2500, CP6500, CP7500, DS120, DS140, XR4040)	
20	085411016	TAPTITE BIND B M4X10		43	XE6450001	SELECTING BUTTON B (CE5500PRW, CE5500, FS20, FS40, FS40WT)	
21	138337022	RUBBER CUSHION A		44	XE6509001	SELECTING BUTTON B (HS2500, CP6500, CP7500, DS120, DS140, XR4040)	
22	026350235	WASHER PLAIN M 3.5		45	XE6451001	MANUAL BUTTON A (CE5500PRW, CE5500, FS20, FS40, FS40WT)	
23	083361216	TAPTITE PAN B M3.5X12		46	XE6510001	MANUAL BUTTON A1 (HS2500, CP6500, CP7500, DS120, DS140, XR4040)	
24	XC4077021	BASE PLATE RUBBER		47	XE6511001	MANUAL BUTTON A2 (HS2500, CP6500, CP7500, DS120, DS140, XR4040)	
25	XE1372001	SPOOL PRESSER C					
26	XE7290001	FRONT COVER (CE5500PRW)					
	XE8371001	FRONT COVER (CE5500)	1000017829				
	XE8844001	FRONT COVER (FS20)	1000019547				
	XE8853001	FRONT COVER (FS40, FS40WT)	1000019560				
27	XE7293001	FRONT COVER (HS2500, CP7500)					
	XE7800001	FRONT COVER (CP6500)					
	XE8833001	FRONT COVER (DS120)	1000019552				
	XE8838001	FRONT COVER (DS140)	1000019554				
	XE9012001	FRONT COVER (XR4040)	1000020127				
28	XE6504001	DECORATION PLATE (HS2500)					
	XE7801001	DECORATION PLATE (CP6500)					
	XE7805001	DECORATION PLATE (CP7500)					
	XE8834001	DECORATION PLATE (DS120)	1000019552				
	XE8840001	DECORATION PLATE (DS140)	1000019554				
	XE9013001	DECORATION PLATE (XR4040)	1000020127				
29	XE7291001	DECORATION PLATE A (CE5500PRW, CE5500)					


(1) MAIN FRAME / COVER

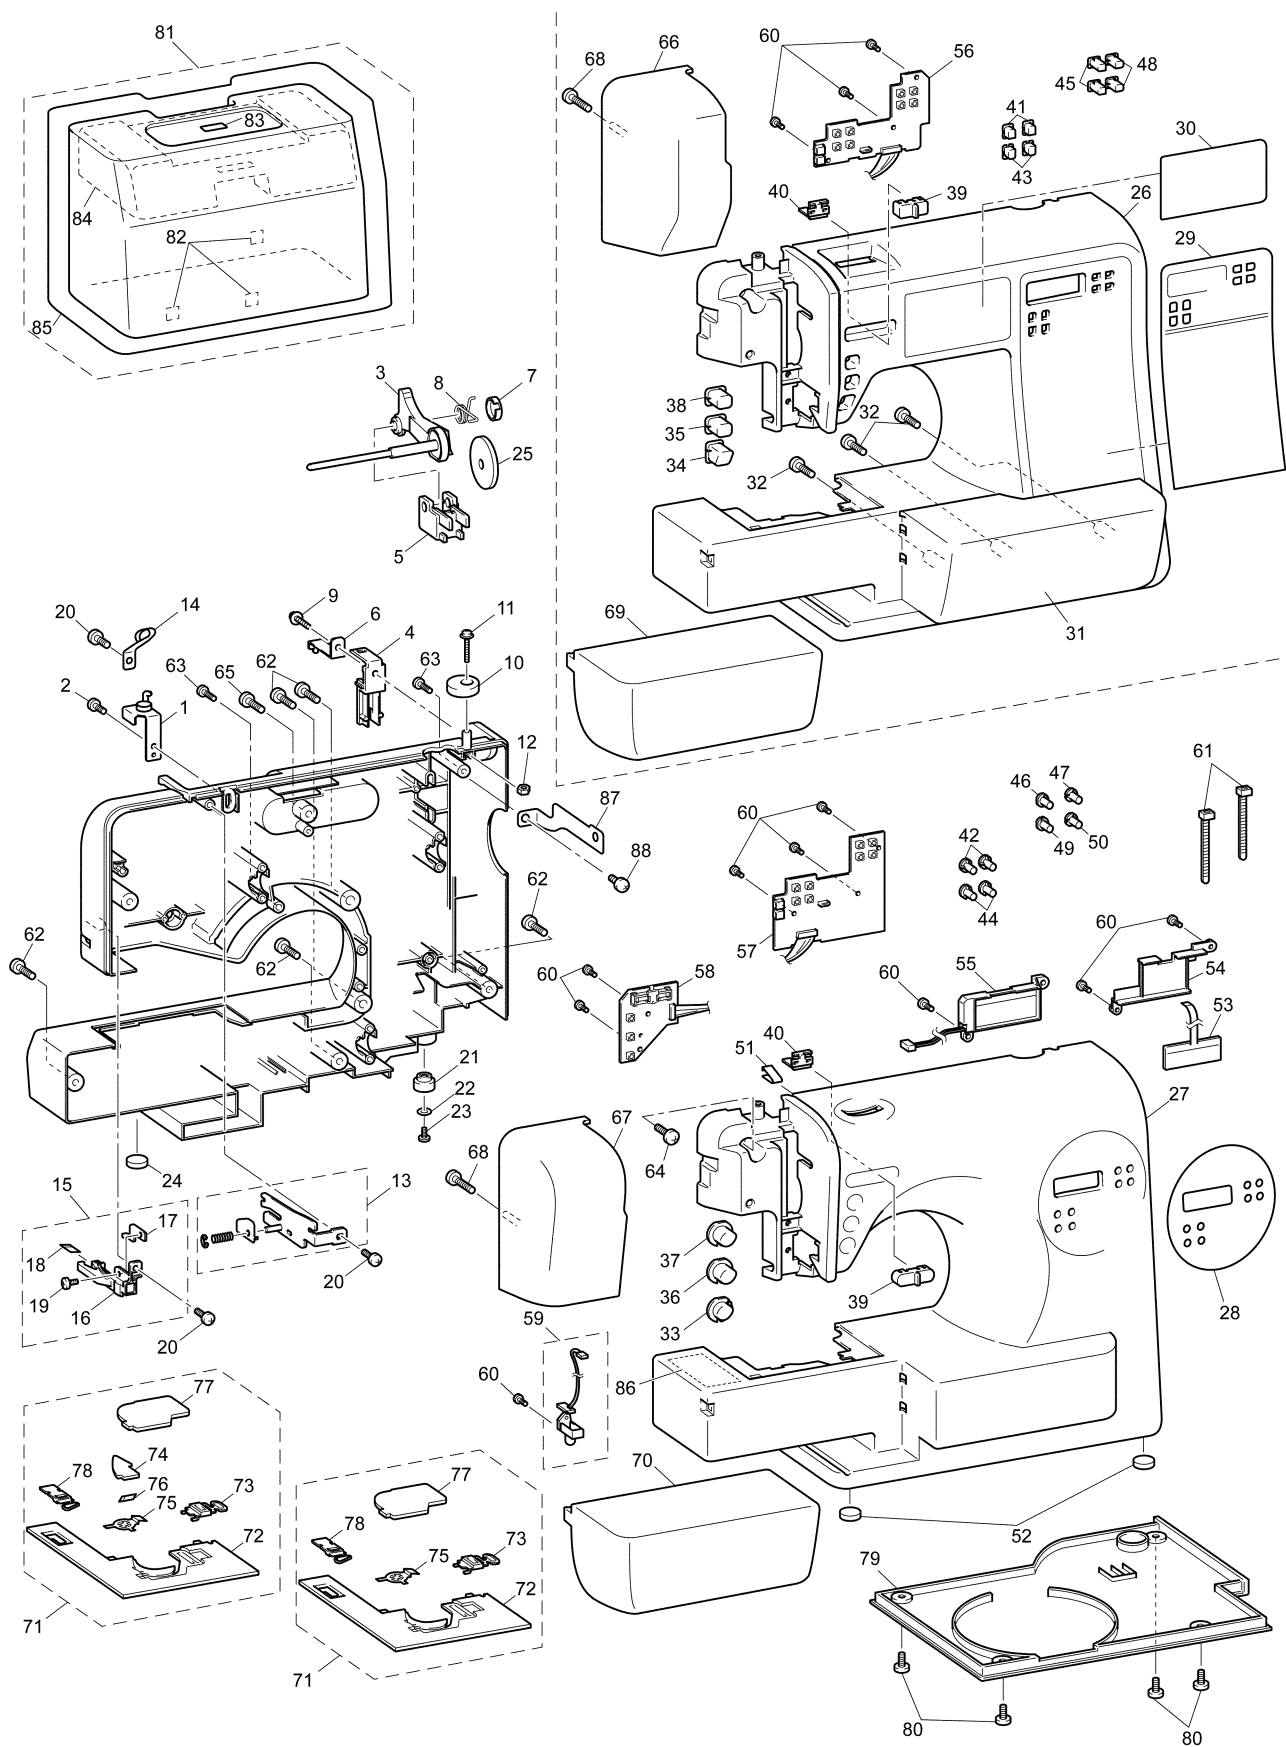

(1) MAIN FRAME / COVER

[illegible]


(2) UPPER SHAFT MECHANISM / NEEDLE BAR / PRESSER FOOT UNIT

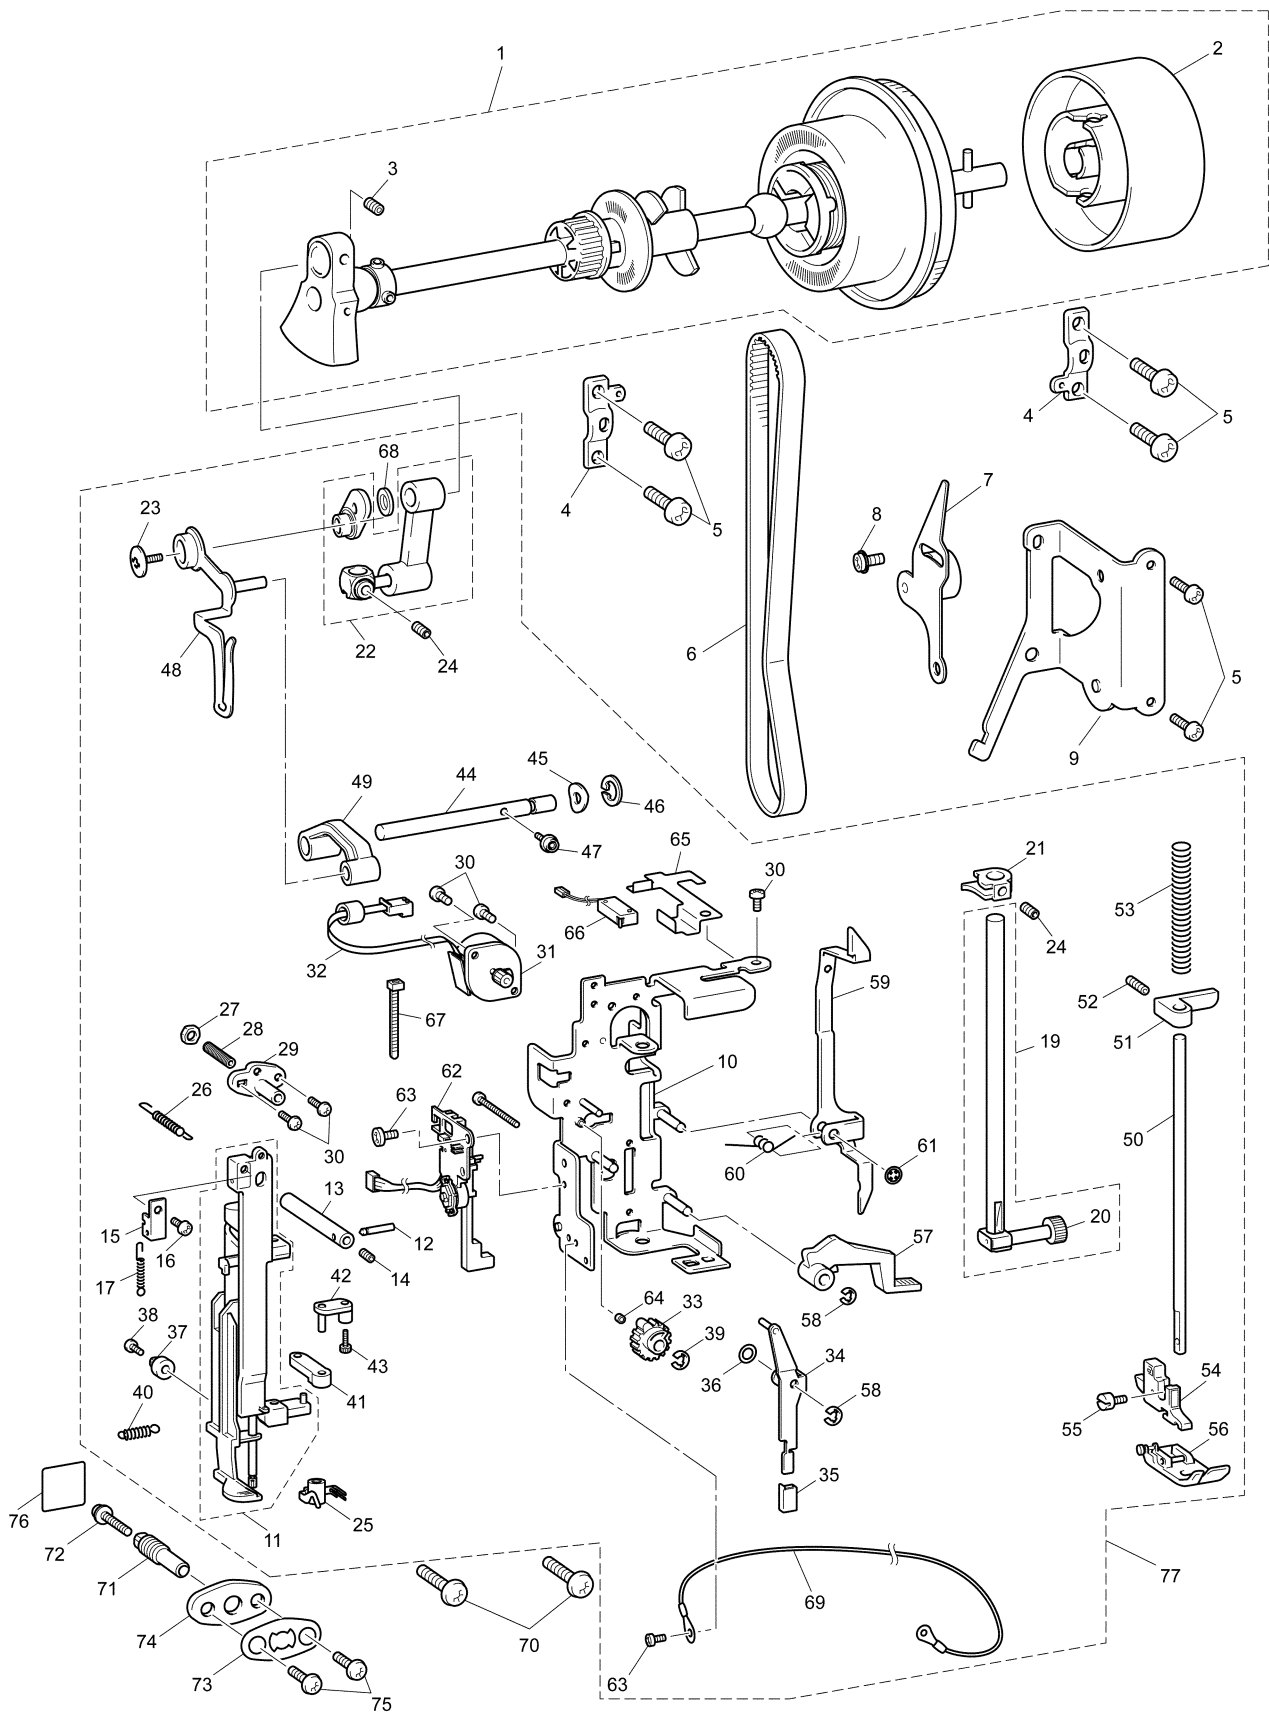

(2) UPPER SHAFT MECHANISM / NEEDLE BAR / PRESSER FOOT UNIT

No.	CODE	NAME	REMARKS	No.	CODE	NAME	REMARKS
UPPER SHAFT MECHANISM				42	XC2437021	SHAFT ASSY	
1	XE7621001	UPPER SHAFT SUPPLY ASSY CP4		43	XC3037021	SCREW3X10	
2	XC3529021	PULLEY		44	XC8765121	SHAFT	
3	012500532	SET SCREW SOCKET (FT) M5X5		45	XZ5030001	WASHER, SPRING	
4	XC3534121	UPPER SHAFT BEARING PRESSER		46	048050346	RETAINING RING E5	
5	XC3496021	GIZA TITE 5X16		47	XC3338021	SCREW 3X8	
6	XC4869021	T BELT 420-5GT-6		48	XC8564031	THREAD TAKE-UP LEVER	
7	XC4870021	TENSION PULLEY ASSY		49	XC4897020	THREAD TAKE-UP LEVER LINK	
8	0A4400806	SCREW PAN (S/P WASHER) M4X8		50	XC4898021	PRESSER BAR	
9	XC8739020	TENSION PULLEY HOLDER		51	XC4899121	PRESSER BAR CLAMP	
NEEDLE BAR / PRESSER FOOT UNIT				52	XC7207021	SCREW STUD M5	
10	XC8741121	BASE HOLDER ASSY		53	XC4900021	SPRING	
11	XE8695001	NEEDLE BAR SUPPORTER ASSY (OTHER)	1000019598	54	XC3015031	PRESSER FEED HOLDER ASSY	
	XC8749221	NEEDLE HOLDER SUB ASSY (FS20, FS40, FS40WT)	1000019560	55	132730122	TIGHTENING SCREW 3.57	
12	XC2420020	SHAFT		56	XC3021031	Z FOOT	
13	XC8754021	NEEDLE HOLDER SHAFT A		57	XC4902021	PRESSER FOOT LIFTER	
14	014300532	SET SCREW SOCKET (CP) M3X5		58	048040346	RETAINING RING E4	
15	XC8755020	PLATE		59	XC8766020	THREAD RELEASE LEVER	
16	060300516	SCREW BIND M3X5	1000019598	60	XC4904121	SPRING	
17	X50476021	SPRING		61	146200021	RETAINING RING, CS4	
18	XE6083001	THREAD SLIDER GUIDE	1000019598	62	XC8767021	BH SWITCH ASSY	
19	XE3825001	NEEDLE BAR ASSY N		63	0A4400806	SCREW PAN (S/P WASHER) M4X8	
20	XE3827001	NEEDLE CLAMP SCREW		64	XC8773020	RUBBER	
21	XC2434021	NEEDLE THREAD BLOCK		65	XC8774021	PRESSER SWITCH HOLDER	
22	XC6562131	NEEDLE BAR CRANK ROD ASSY		66	XC8775021	PF SWITCH ASSY, LE	
23	132051022	SCREW, FLAT SM3.57-40X7 L		67	X53169020	BAND	
24	012400432	SET SCREW SOCKET (FT) M4X4		68	X53330020	WASHER	
25	XA1854051	THREADER HOOK ASSEMBLY		69	XE3856001	LEAD WIRE ASSY: GROUND	
26	XC2429021	SPRING		70	XC4961021	GIZA TITE 5X20	
27	X56851021	LOCK NUT		71	XC4905121	ADJUSTING SCREW	
28	014401232	SET SCREW SOCKET (CP) M4X12		72	060302506	SCREW BIND M3X25	
29	XC8756021	SHAFT BUSHING		73	XC6056120	PLATE SPRING	
30	060300616	SCREW BIND M3X6		74	XC4906020	ADJUSTING PLATE	
31	XC8757021	Z PULSE MOTOR: M35SP-9N		75	085411016	TAPTITE BIND B M4X10	
32	XC8759021	LEAD WIRE ASSY, ZPM-LE		76	XC4907021	LABEL	
33	XC8760020	Z ZIGZAG CAM		77	XE6416101	NEEDLE UNIT SUPPLY ASSY CP3	1000019598
34	XC8761121	Z ZIGZAG LEVER ASSY					
35	XC8764020	Z LEVER CAP					
36	137713020	POLYESTER SLIDER					
37	XC2435020	ZIGZAG ADJUSTING NUT					
38	018301032	BOLT SOCKET M3X10					
39	048030346	RETAINING RING E3					
40	XC2748021	SPRING-Z					
41	XC2436021	NEEDLE HOLDER BLOCK					


(3) FEED UNIT

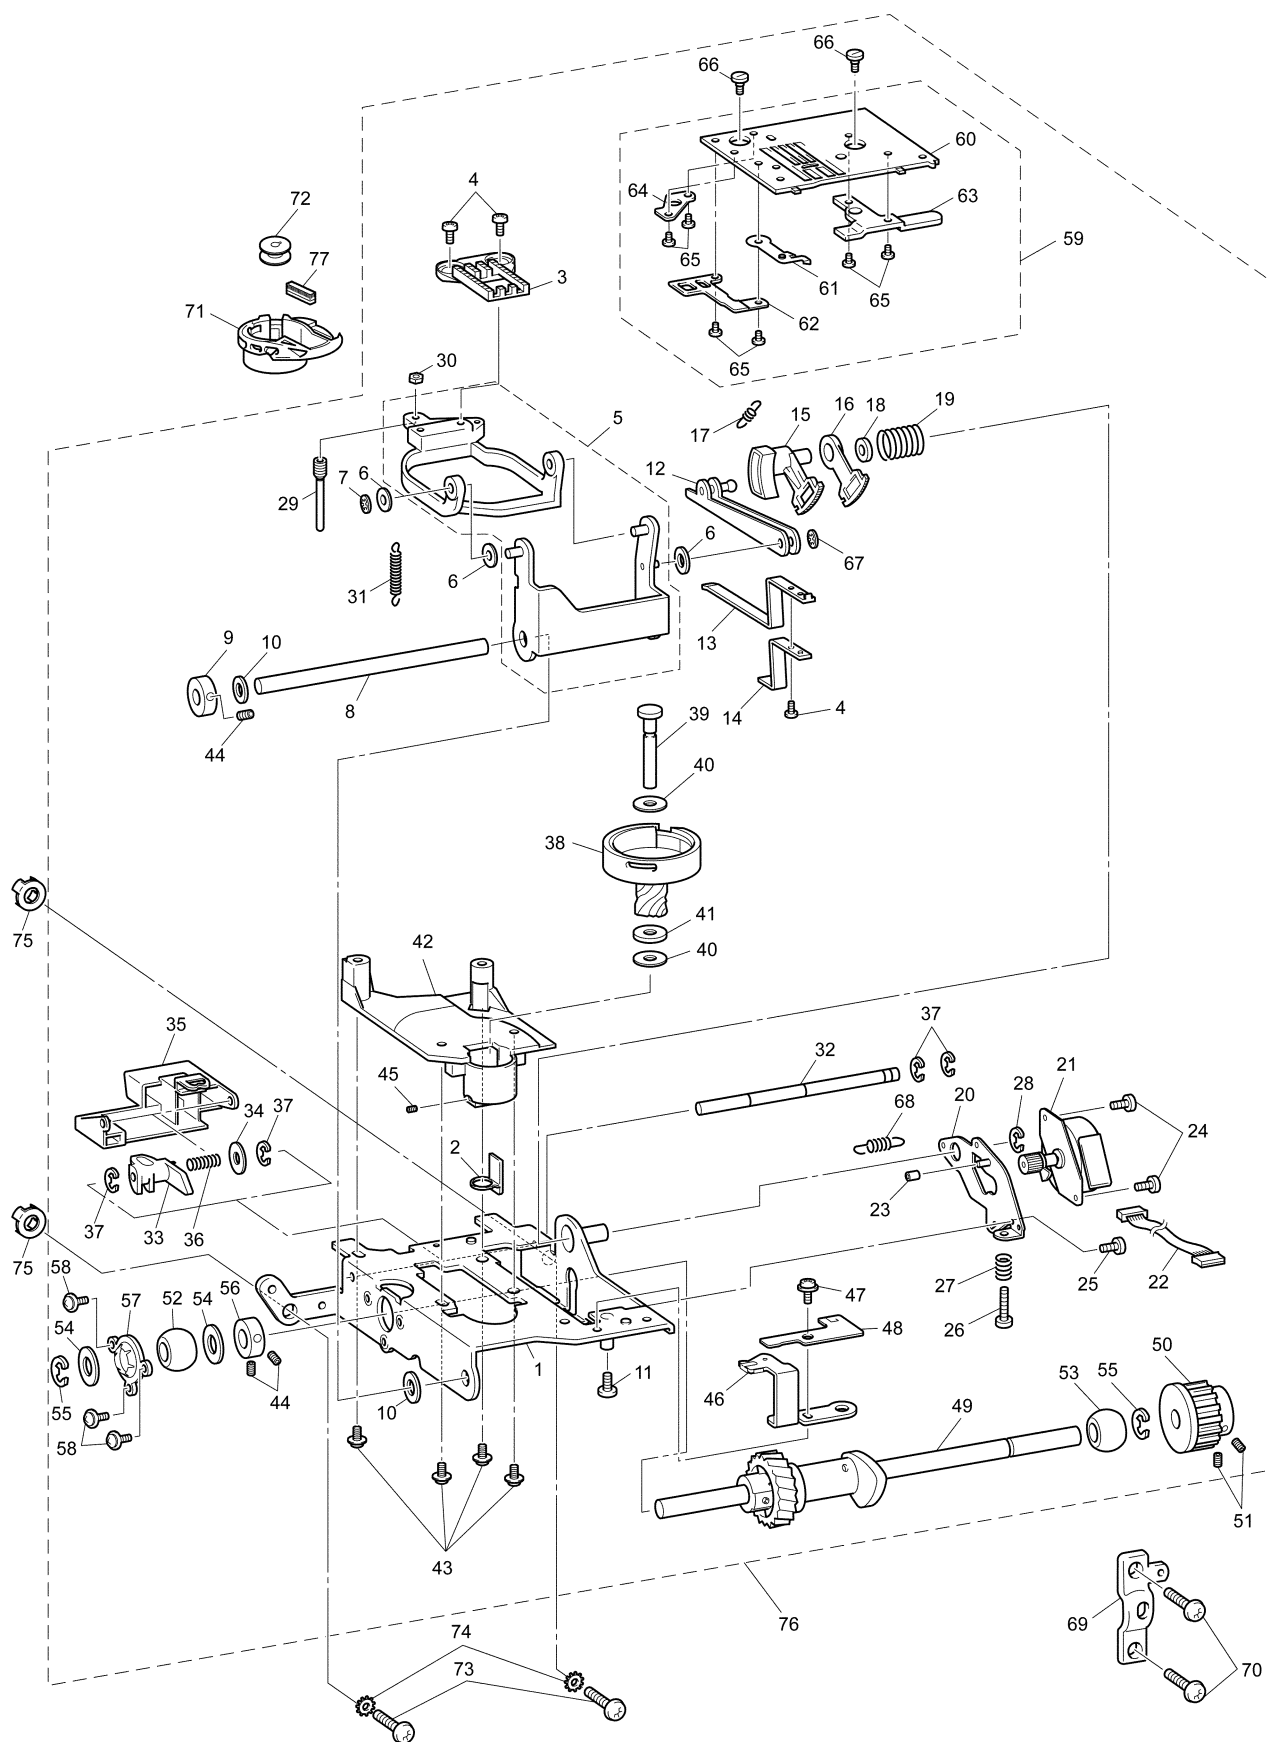

(3) FEED UNIT

No.	CODE	NAME	REMARKS	No.	CODE	NAME	REMARKS
1	XE6467101	BASE PLATE ASSY		45	014400632	SET SCREW SOCKET (CP) M4X6	
2	XE5656001	FEED ARM SUPPORTER		46	XE7558001	INNER ROTARY HOOK BRACKET ASSY	
3	XE7489001	FEED DOG	1000020178	47	0A5300806	SCREW PAN (S/P WASHER) M3X8	
4	060300616	SCREW BIND M3X6		48	XE7323101	IRH BRACKET SUPPORT PLATE	
5	XE2015201	FEED BAR ASSY		49	XC8796021	LOWER SHAFT ASSY	
6	137999020	POLYESTER SLIDER		50	XC4943021	TIMING PULLEY D	
7	146200021	RETAINING RING, CS4		51	014500532	SET SCREW SOCKET (CP) M5X5	
8	XC8789021	HORIZONTAL FEED SHAFT		52	X52664020	LOWER SHAFT BUSHING	
9	130676121	SET SCREW COLLAR		53	XC3792020	UPPER SHAFT BUSHING	
10	X50546020	WASHER,THRUST		54	X51383020	WASHER,THRUST	
11	060301206	SCREW BIND M3X12		55	048060346	RETAINING RING E6	
12	XC4924021	FEED ARM ASSY		56	XC8798021	SET COLLAR	
13	XC4927021	FEED SUPPORTING PLATE		57	XC4944021	BUSHING PRESSER B	
14	XC4928120	FEED SUPPORTING PLATE B		58	085310616	TAPTITE BIND B M3X6	
15	XC2527121	FEED ADJUSTER		59	XE6468001	NEEDLE PLATE A ASSY	
16	XC2529020	F GEAR		60	XE6469001	NEEDLE PLATE A	
17	XC2530021	SPRING		61	XE8148001	STOPPER PLATE	
18	137713020	POLYESTER SLIDER		62	XE7164001	NEEDLE PLATE B SUPPORT PLATE	
19	XC2531021	SPRING		63	XE6471001	F GEAR STOPPER PLATE	
20	XC8791021	FPM HOLDER SUB ASSY		64	XE6472001	NEEDLE PLATE HOLDER	
21	XC8757021	Z PULSE MOTOR:M35SP-9N		65	060260316	SCREW BIND M2.6X3	
22	XC8793021	LEAD WIRE ASSY,FPM-LE		66	XE6473001	SCREW NEEDLE PLATE	
23	XC8773020	RUBBER		67	X56655021	RETAINING RING: CSTW-3.5	
24	060300416	SCREW BIND M3X4		68	XE1478001	SPRING	
25	XE6639001	SCREW3X8		69	XC3534121	UPPER SHAFT BEARING PRESSER	
26	018402533	BOLT SOCKET M4X25		70	XC3496021	GIZA TITE 5X16	
27	XC2537021	SPRING		71	XE7560001	INNER ROTARY HOOK ASSY	
28	XC9924021	RETAINING RING 10		72	X52800120	BOBBIN	
29	XC3941021	VERTICAL ADJUSTER SCREW ASSY		73	XC3805021	GIZA TITE 5X16	
30	XC2546021	M5 NUT		74	XZ5053001	WASHER EX TOOTH 5	
31	XE1940001	SPRING		75	XE8564001	UNIT WASHER	1000018411
32	XC8794021	VERTICAL FEED SHAFT		76	XE7622101	FEED UNIT SUPPLY ASSY CP4	
33	XC2551020	VERTICAL LEVER		77	XC3137000	PILE	1000019975
34	025040332	WASHER PLAIN L 4					
35	XC8795121	DROP KNOB					
36	XC2550021	SPRING					
37	048030346	RETAINING RING E3					
38	XD0115021	OUTER ROTARY HOOK ASSY					
39	XD1943021	OUTER ROTARY HOOK SHAFT					
40	137805022	SPACER					
41	137976021	WASHER 6					
42	XE5655001	SHAFT SUPPORTER					
43	0A4400806	SCREW PAN (S/P WASHER) M4X8					
44	014400432	SET SCREW SOCKET (CP) M4X4					


(4) BOBIN WINDING MECHANISM / NEEDLE THREADING MECHANISM

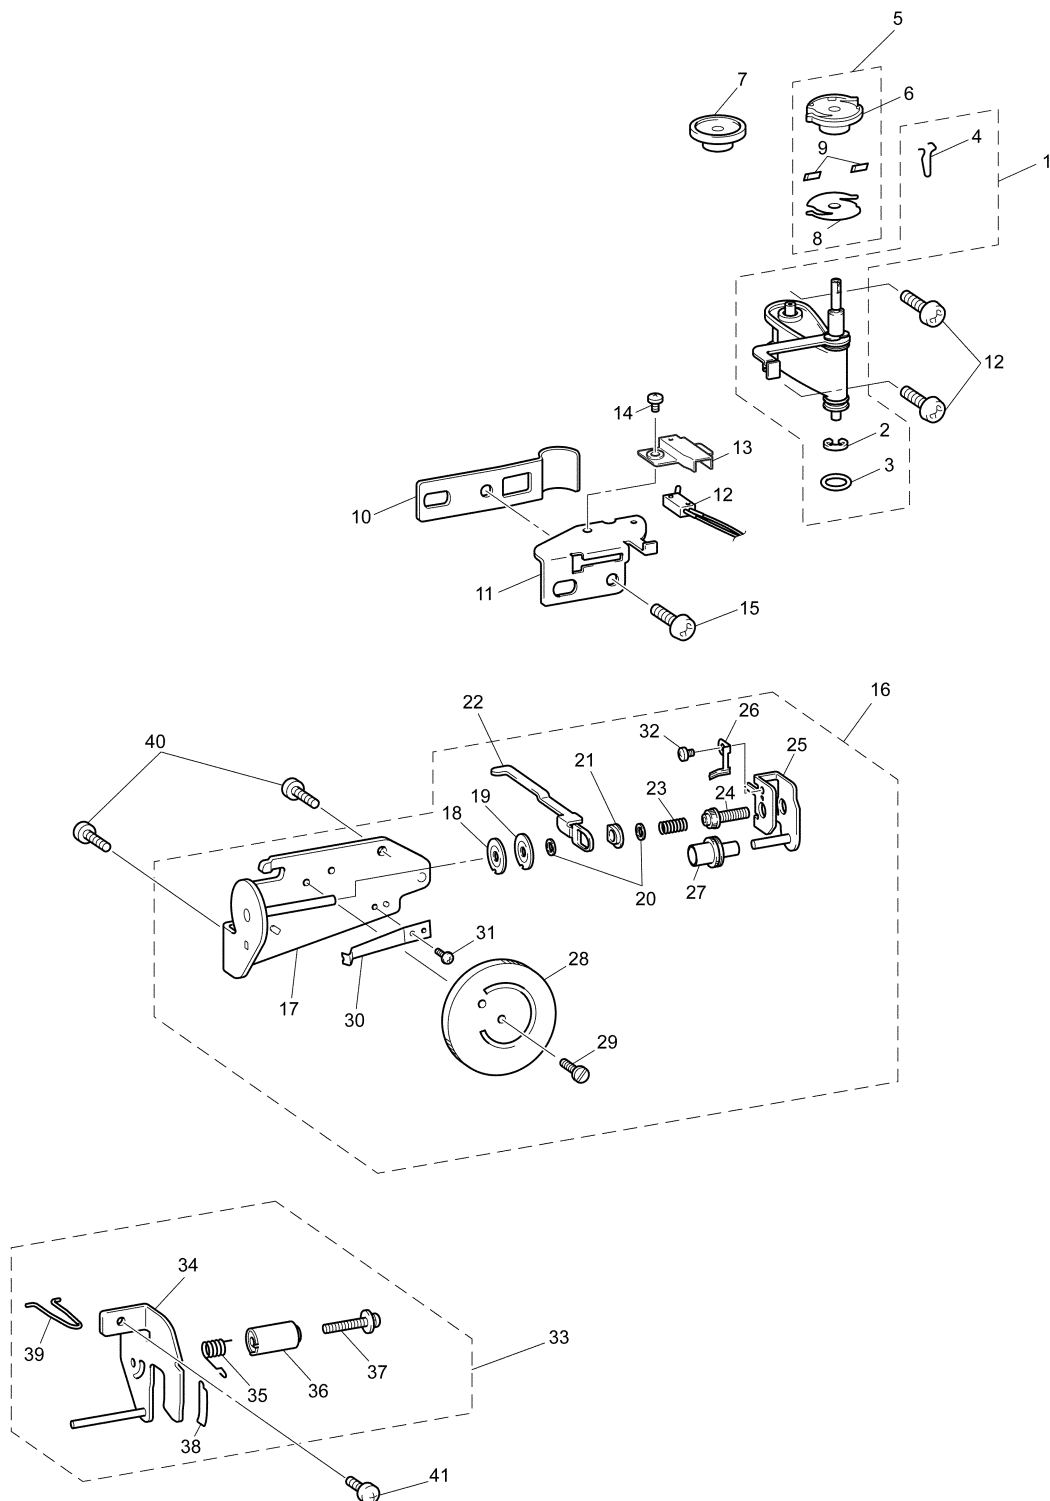

(4) BOBIN WINDING MECHANISM / NEEDLE THREADING MECHANISM

[illegible]


(5) ELECTRIC PARTS / MAIN MOTOR UNIT

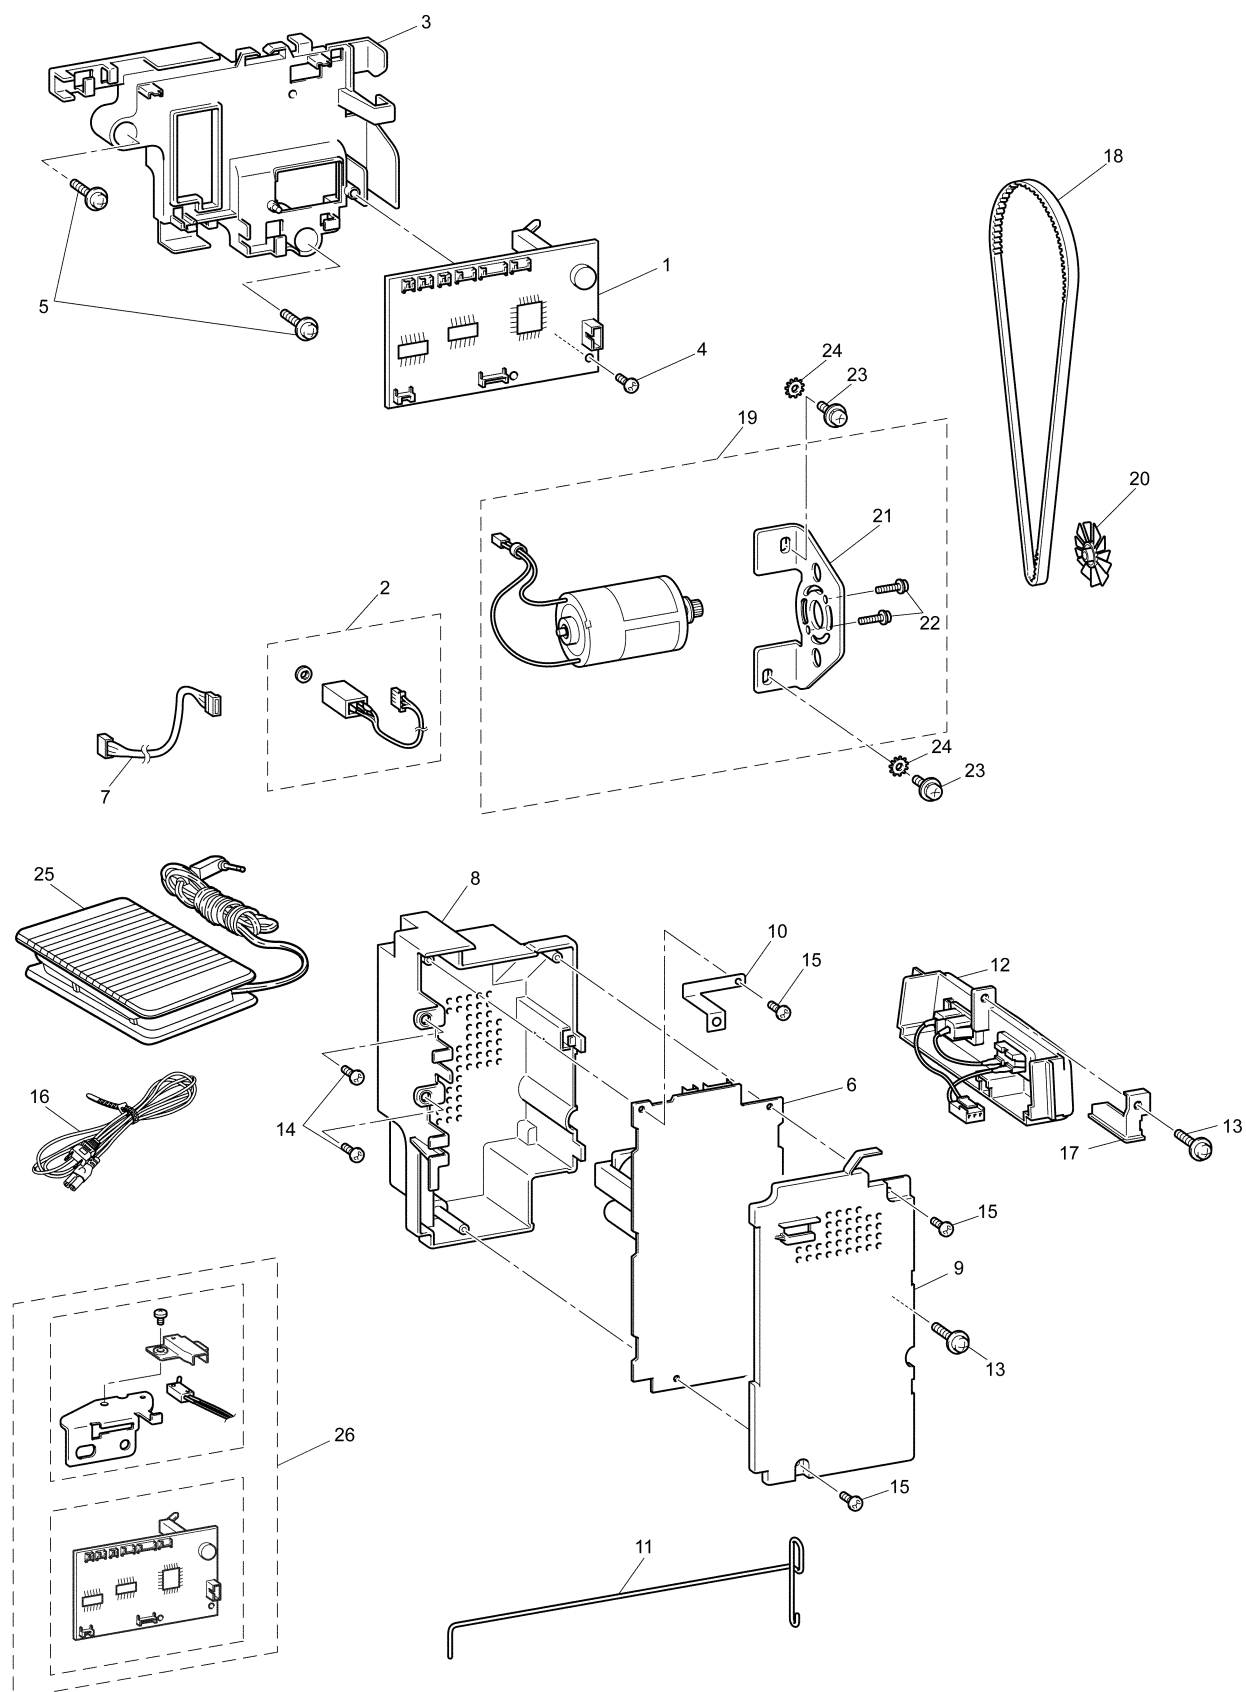

(5) ELECTRIC PARTS / MAIN MOTOR UNIT

No.	CODE	NAME	REMARKS	No.	CODE	NAME	REMARKS
ELECTRIC PARTS				MAIN MOTOR UNIT			
1	XE8622001	MAIN PCB SUPPLY ASSY-50 (F0G*****~) (CE5500PRW, CE5500)	1000017829	18	XC3806121	TIMING BELT 372-2GT-6	
	XE8621001	MAIN PCB SUPPLY ASSY-70 (F0G*****~) (HS2500, CP7500)	1000019788	19	XE7610001	MAIN MOTOR SUPPLY ASSY CP4	
	XE8830001	MAIN PCB SUPPLY ASSY-20 (DS120, FS20)	1000019547	20	XC3803020	MOTOR FAN	
	XE8620001	MAIN PCB SUPPLY ASSY -60 (F0G*****~) (CP6500)	1000019788	21	XC8815021	MOTOR HOLDER	
	XE8820001	MAIN PCB SUPPLY ASSY-40 (DS140, FS40, FS40WT)	1000019560	22	0A5300806	SCREW PAN (S/P WASHER) M3X8	
	XE8916001	MAIN PCB SUPPLY ASSY-40 (XR4040)	1000020127	23	XC3805021	GIZA TITE 5X16	
2	XC9830021	FC JACK SUPPLY ASSY-120 (120V)		24	XZ5053001	WASHER EX TOOTH 5	
	XC9832021	FC JACK SUPPLY ASSY-230 (230V)		25	XC8816021	FOOT CONTROLLER:FC-322-81-LF (USA, CAN, MEX)	
3	XC8809121	SHUTTER COVER			XD0501021	FOOT CONTROLLER:FC-322-LF-EU (OTHER)	1000019560
4	085311016	TAPTITE BIND B M3X10					
5	087411416	TAPTITE CUP B M4X14					
6	XE7613001	POWER PCB SUPPLY ASSY CP4 120V					
	XE8831001	POWER PCB SUPPLY ASSY CP4 230V	1000019560				
7	XC8824021	LEAD WIRE ASSY,POWER-LE					
8	XE6484001	INSULATION COVER					
9	XE6485001	INSULATION PLATE					
10	XE7107001	POWER PLATE SPRING					
11	XE3728001	SPRING					
12	XE7309001	INLET ASSY CP4 120					
	XE8609001	INLET ASSY CP4 230					
13	087411416	TAPTITE CUP B M4X14					
14	060400816	SCREW BIND M4X8					
15	085311016	TAPTITE BIND B M3X10					
16	XC6052021	POWER SUPPLY CORD:UL CSA-LF (USA, CAN, MEX)					
	X59354121	POWER SUPPLY CORD -BS (UK, IRE)	1000019910				
	XA0070121	POWER SUPPLY CORD (OTHER)	1000019560				
17	XE7555001	INLET PRESSER					
26	XE8641001	MAIN PCB SUPPLY SET-50 (~E0G*****~) (CE5500PRW, CE5500)	1000019788				
	XE8640001	MAIN PCB SUPPLY SET-70 (~E0G*****~) (HS2500, CP7500)	1000019788				
	XE8639001	MAIN PCB SUPPLY SET -60 (~E0G*****~) (CP6500)	1000019788				


(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE

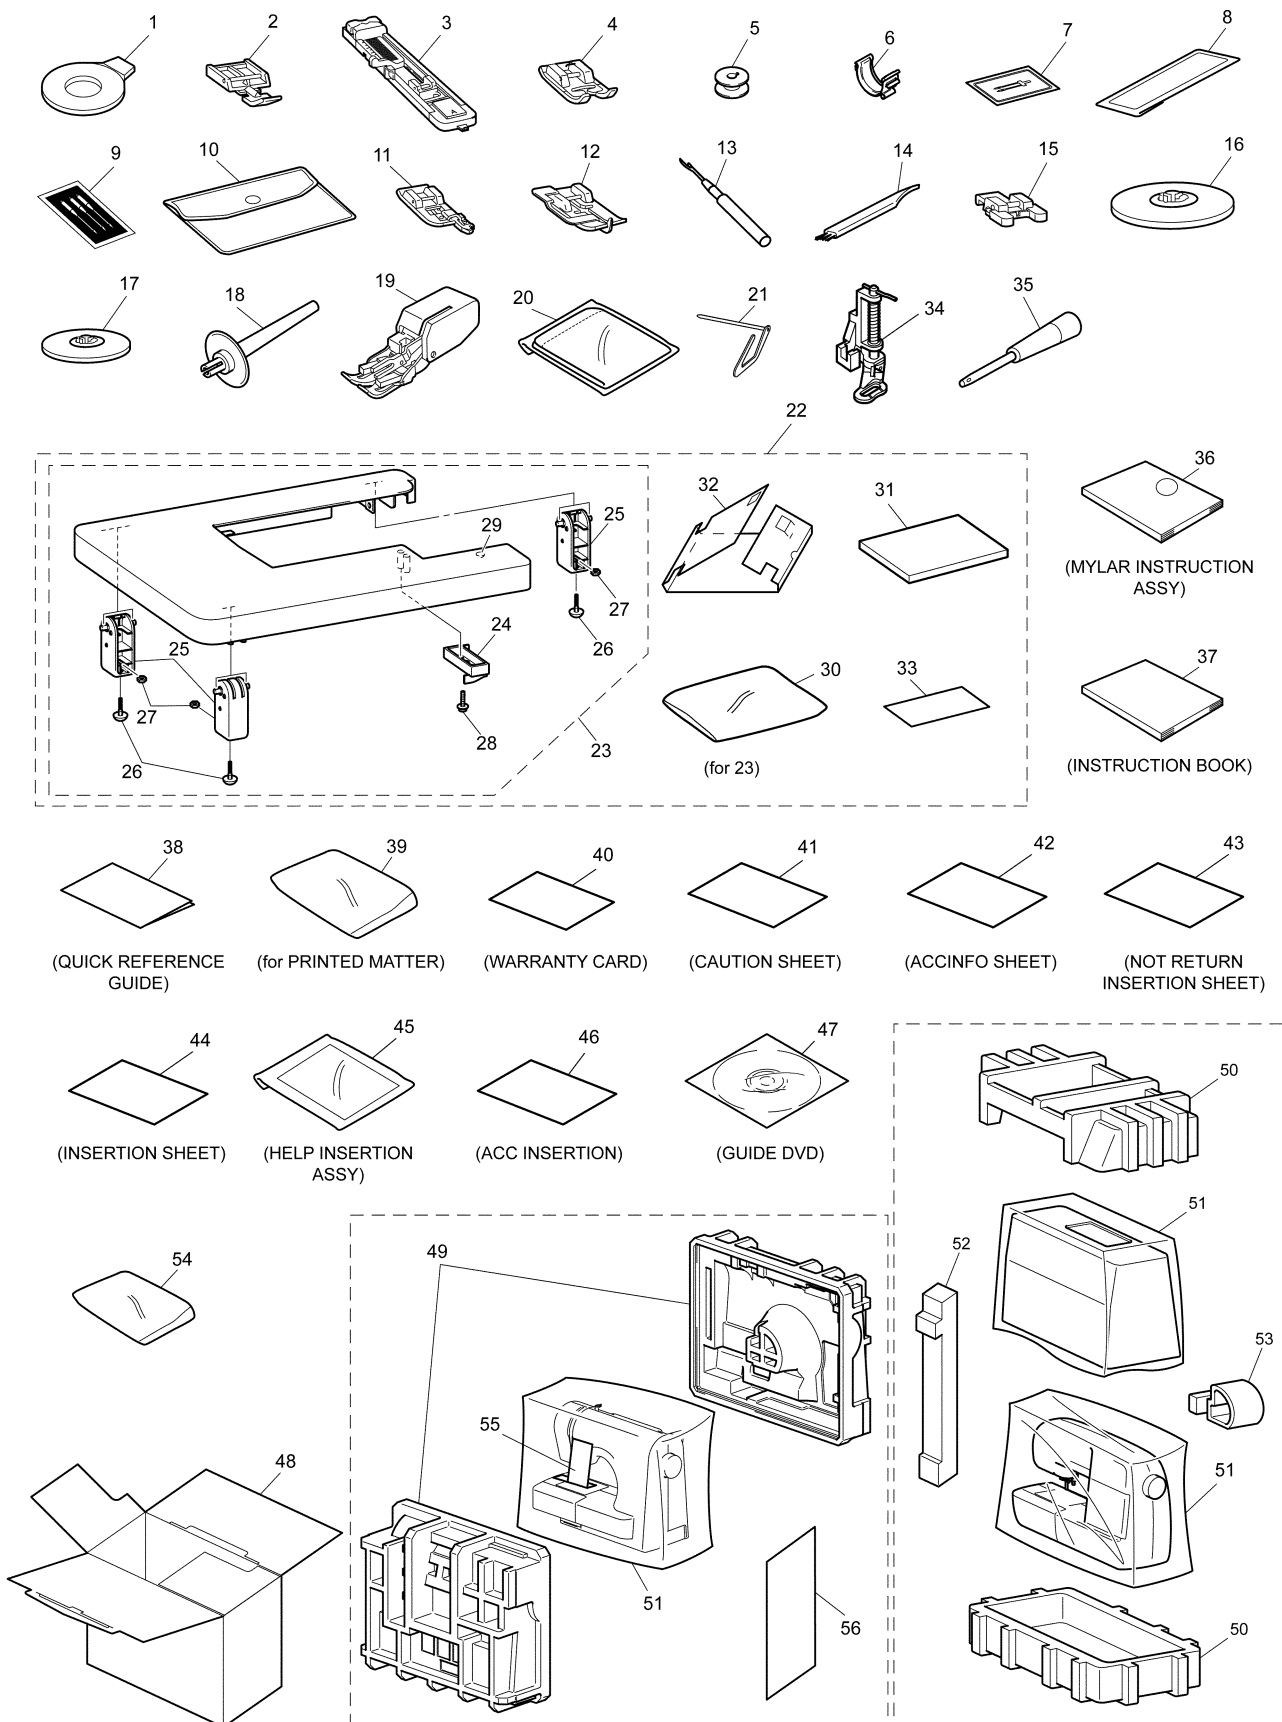

(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE

No.	CODE	NAME	REMARKS	No.	CODE	NAME	REMARKS
ACCESSORY PARTS				USER MANUAL / OTHER PARTS			
1	XC1074051	DISC-SHAPED SCREWDRIVER		36	XE6527101	MYLAR INSTRUCTION ASSY ENG	1000017679
2	X59370021	ZIPPER FOOT			XE6529101	MYLAR INSTRUCTION ASSY SPA	1000017679
3	XC2691033	BH PRESSER FOOT ASSY		37	XE6530101	INSTRUCTION BOOK SPA (MEX)	1000017829
4	XD0810031	TRANSPARENCY PRESSER FOOT			XE8755001	INSTRUCTION BOOK ENG	1000019552
5	X52800120	BOBBIN			XE8756001	INSTRUCTION BOOK GER	1000019552
6	XE3060001	BOBBIN CLIP (CE5500PRW)			XE8757001	INSTRUCTION BOOK FRE	1000019552
7	131096121	NEEDLE SET (1 PCE)			XE8758001	INSTRUCTION BOOK DUT	1000019552
8	XC8834021	NEEDLE SET			XE8759001	INSTRUCTION BOOK ITA	1000019552
9	XD0360021	NEEDLE SET G			XE8760001	INSTRUCTION BOOK SPA	1000019911
10	XC4487021	ACCESSORY BAG			XE8761001	INSTRUCTION BOOK DAN/NOR	1000019912
11	XE6305101	OVERCASTING STITCH FOOT ASSY			XE8762001	INSTRUCTION BOOK SWE/FIN	1000019912
12	XC4051031	BLIND STITCH FOOT ASSY		38	XE6531001	QUICK REFERENCE GUIDE (CE5500PRW, CE5500)	
13	XZ5082001	SEAM RIPPER	1000020346		XE7321101	QUICK REFERENCE GUIDE (HS2500, CP7500)	
14	X59476021	CLEANING BRUSH			XE7840001	QUICK REFERENCE GUIDE (CP6500)	
15	XE2137001	BUTTON SEWING FOOT			XE8765001	QUICK REFERENCE GUIDE (DS120)	1000019552
16	130012024	SPOOL PRESSER A			XE8766001	QUICK REFERENCE GUIDE (FS20, FS40, FS40WT)	1000019547
17	130013124	SPOOL PRESSER B			XE8764001	QUICK REFERENCE GUIDE (DS140)	1000019554
18	XE2241001	EXTRA SPOOL PIN			XE9036001	QUICK REFERENCE GUIDE (XR4040)	1000020127
19	XE1678201	WALKING FOOT ASSY H 7MM (CP7500)		39	130800021	BAG 230X310H	
20	XC8973021	DUST COVER ASSY (CP6500)		40	XC0380021	WARRANTY CARD (EXCEPT: DS140, DS120, FS20, FS40, FS40WT)	
	XA2112022	DUST COVER ASSY (DS120, DS140, FS20, FS40, FS40WT)	1000019552	41	XD0120021	CAUTION SHEET S33	
21	X59819021	QUILTER (CP7500)		42	XC7488021	ACCINFO SHEET (EXCEPT: DS140, DS120, FS20, FS40, FS40WT)	
22	XC9809021	LE WIDE TABLE ASSY US (CP7500, FS40WT)		43	XE4888001	NOT RETURN INSERTION SHEET (EXCEPT: CE5500, DS140, DS120, FS20, FS40, FS40WT)	
23	XC9357121	WIDE TABLE SUB ASSY (CP7500, FS40WT)		44	XE4987001	INSERTION SHEET	
24	XC9360021	FIXING PLATE A (CP7500, FS40WT)			XD0256121	INSERTION WEEE (DS120, DS140, FS20, FS40, FS40WT)	1000019552
25	XC4495021	TABLE FOOT (CP7500, FS40WT)		45	XE8130001	HELP INSERTION ASSY (CE5500PRW)	
26	XD1223021	ADJUSTING FOOT (CP7500, FS40WT)		46	XE7836001	ACC INSERTION (CP6500)	
27	021400206	NUT 2 M4 (CP7500, FS40WT)			XE7841001	ACC INSERTION (CP7500)	
28	087411416	TAPTITE CUP B M4X14 (CP7500, FS40WT)		47	XE8768001	INSTRUCTION DVD PAL (DS120, DS140, FS20, FS40, FS40WT)	1000020242
29	X59853020	RUBBER CUSHION (CP7500, FS40WT)					
30	X61231021	BAG 400X500H (CP7500, FS40WT)					
31	XC9361020	LE WIDE TABLE CARTON (CP7500, FS40WT)					
32	XC9362020	PAD (CP7500, FS40WT)					
33	XC9802021	INSTRUCTION MANUAL (CP7500, FS40WT)					
34	XD1819021	QUILTING FOOT (CP7500)					
35	XZ5051001	PUNCH (CP7500)					







(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE

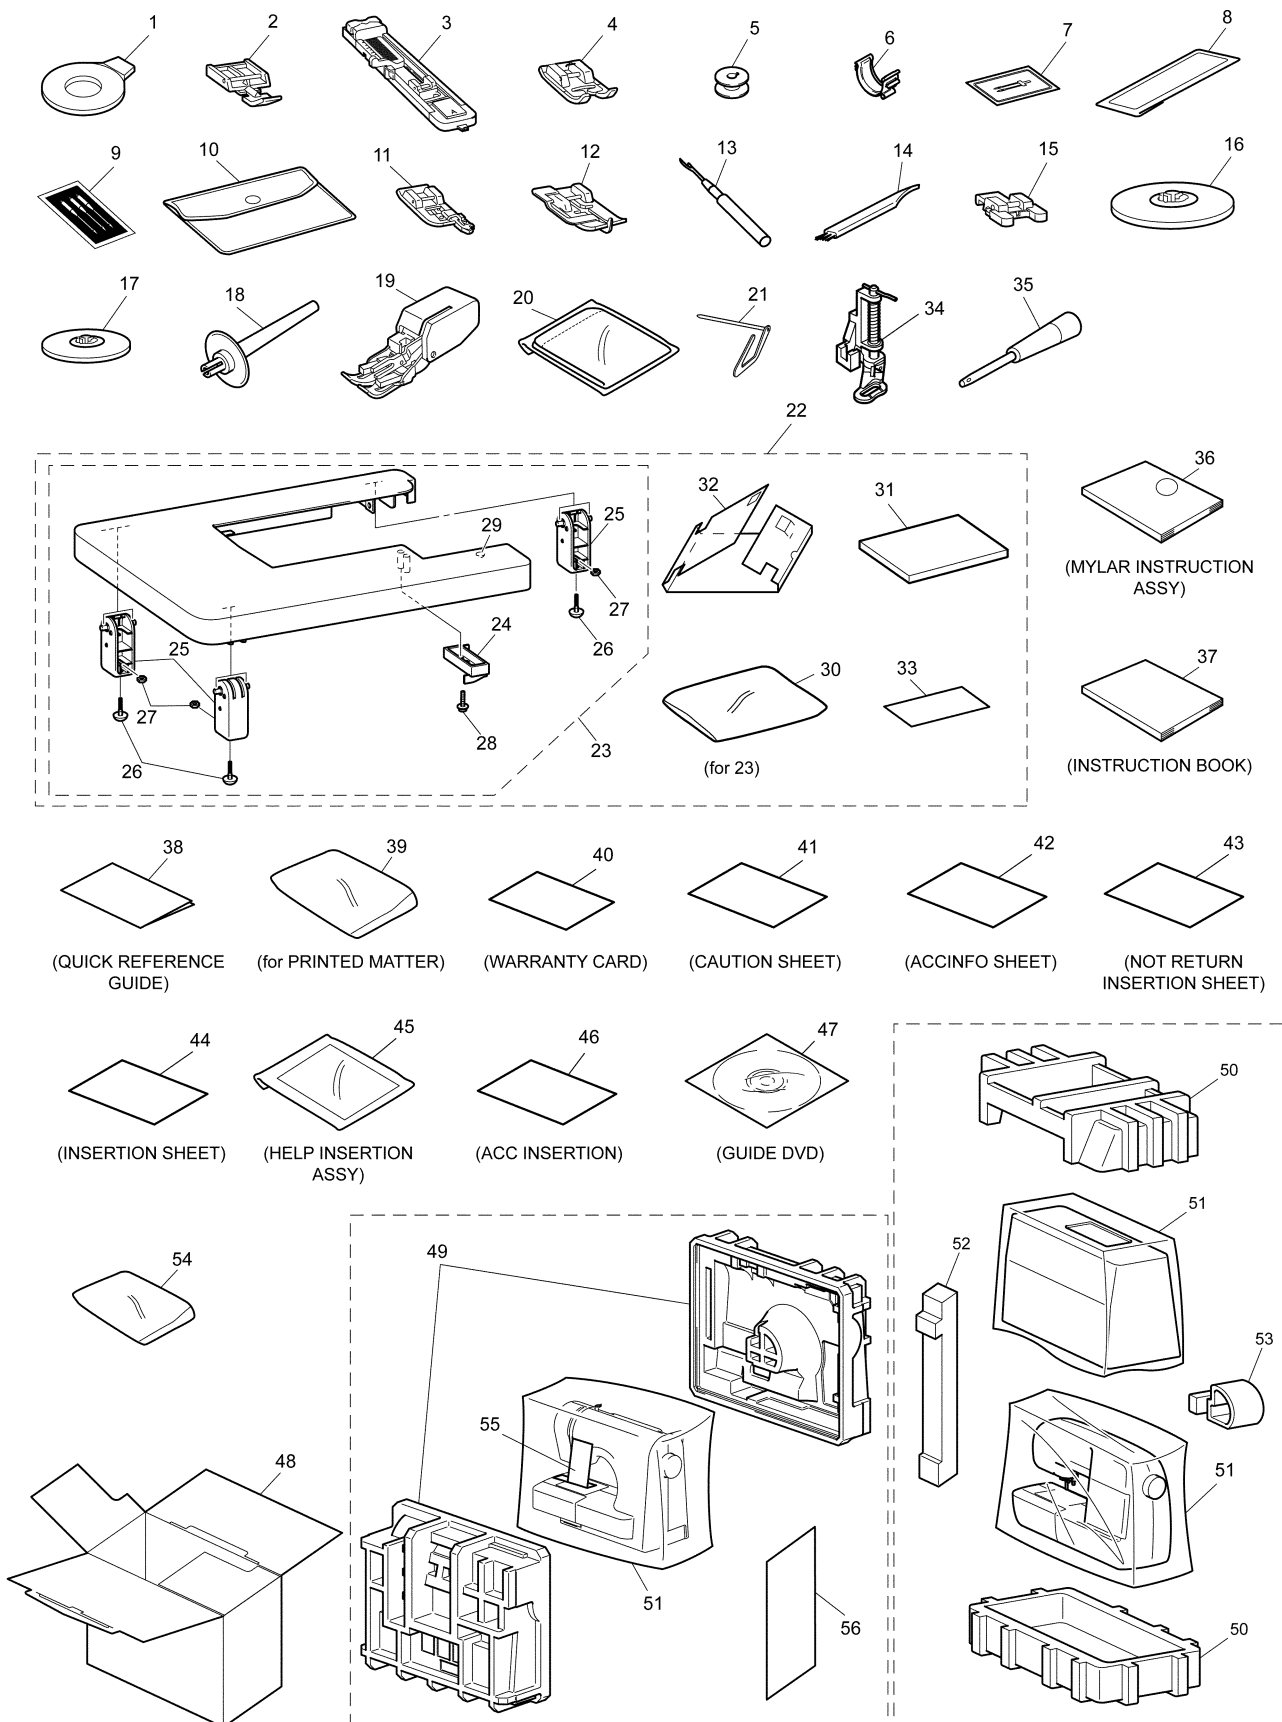

(6) ACCESSORY PARTS / USER MANUAL / OTHER PARTS / PACKAGE

[illegible]

   SPARE PARTS

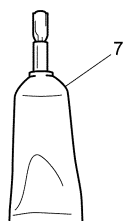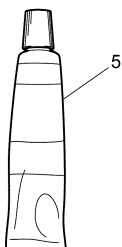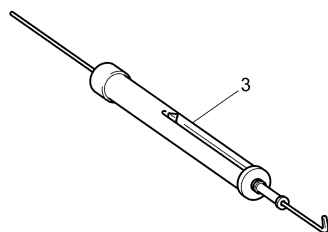

SPARE PARTS

[illegible]

brother®

CE5500PRW/CE5500/HS2500/CP6500/CP7500/
DS120/DS140/FS20/FS40/XR4040/**FS40WT**
01A10HF885V60/V61/V62V63/V64/V65
01. 2010.
09. 2010.